

## Create Speed Dial Key

### Procedure:

1. Navigate to **Menu -> Features-> Dsskey**
2. Select the desired line key
3. Select **SpeedDial** from the **Type** field
4. Select the desired line from the **Account ID** field
5. Do one of the following
  - (Optional) Enter the string that will appear on the phone screen in the **Label** field.  
Enter the contact number you want to dial out directly in the **Value** field.  
You can also enter the contact number with the DTMF sequence that you want to send in the **Value** field. The contact number and DTMF sequence are separated by commas. One comma stands for 500 milliseconds. For example, **1234,,123#** means the phone dials out the number 1234 first, then the call is set up for 1 second, it sends the DTMF sequence 123# to the remote party.
  - For the SIP-T46S/T46G IP phones, highlight the **Label** or **Value** field. Press Directory (Dir) and then select the desired contact from the Directory list(s).
6. Press **Save**